



Z Wall Box Kit TP

Synchronization Instructions

How to program (pair) your wall box keypad remote to your screen

When programming your wall box remote, you first must enter the "programming state." While in the programming state, the screen will give out continuous short beeps. If there is no action made on the remote, the beeps will cease, and the screen will exit the programming state.


Note: The wireless keypad switch requires one A27 12 v battery (included)

1. Enter the programming state.

- a. Unplug the screen.
- b. Press the "Up" button for 3 seconds and plug in the screen to a power outlet.
- c. You should hear the continuous short beeps. (You are in the programming state.)
- d. Release the "Up" button after beeps stop.

2. Program your remote.

- a. Press the UP button.
- b. You should hear 3 short beeps.
- c. You are now able to control your screen with your wireless keypad switch wall box.

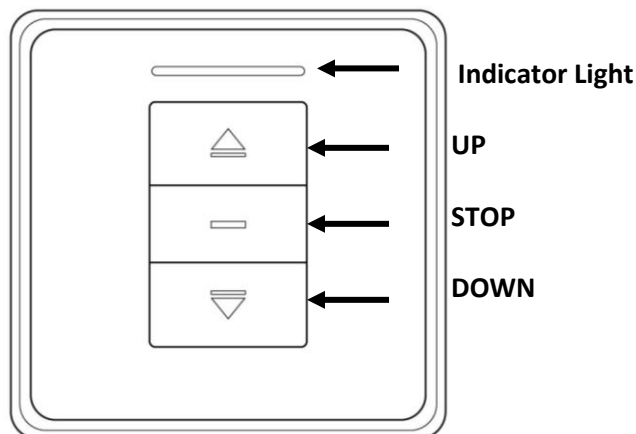

If your Wall Box remote was unable to synchronize to the screen, please repeat the process.

For more information, technical support or your local Elite ProAV contact, please visit www.eliteproav.com